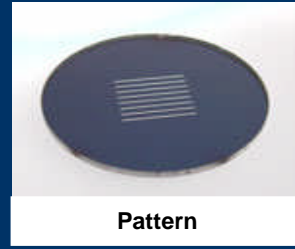


Pattern Replacement**Tools: small screwdriver or tweezers****Pattern
Retaining Ring****Retainer Ring****Pattern****Removal of Retaining Ring**

Screwdriver or Tweezers to remove retaining ring. Retaining Ring will turn Clockwise to install and Counter-Clockwise to remove. There are 2 small holes and 2 slots in ring to install/remove.

Arrangement of Retainer Ring and Pattern.