











## pattern replacement



Tools: small screwdriver or tweezers




Pattern

Retaining Ring



Retainer Ring

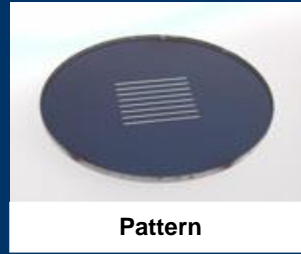

Pattern

### Removal of Retaining Ring

Screwdriver or Tweezers to remove retaining ring. Retaining Ring will turn Clockwise to install and Counter-Clockwise to remove. There are 2 small holes and 2 slots in ring to install/remove.

### Arrangement of Retainer Ring and Pattern.

Retainer Ring on top holding pattern.

Pattern - Remove and Replace

Master Retainer Ring located in base of Projector.  
**DO NOT REMOVE!**





According to IEC 62471:2006. Full documentation upon request.

**Notice**

Exempt Group: No photo biological hazard to eyes or skin even for continuous, unrestricted use.  
Applicable for wavelengths: 625, 850, and 940.

**Caution**

Risk Group 1: Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to eye. Safe for most applications except prolonged exposures.  
Applicable for wavelengths: 395, 470, 505, 530, and WHI.

**Notice**

Risk Group 1: UV emitted from this product. Minimize exposure to eyes and skin. Use appropriate shielding. Safe for most applications except prolonged exposures.  
Applicable for wavelengths: 395

**Caution**

Risk Group 2: UV emitted from this product. Eye or skin irritation may result from exposure. Use appropriate shielding. Does not pose optical hazard if aversion responses limit exposure.  
Applicable for wavelengths: 365